

FITTING INSTRUCTIONS V-8K101LK

● Fitting instructions

Prior to fitting familiarise yourself with its simple action.

Caution: Before drilling or fitting screws check position of glass and seals

1. Open window and position staple 1mm (1/16") from the edge of fixed frame with the circular recess facing inwards, (in exceptional circumstances wood may have to be removed to enable staple to sit square to opening window). Mark and prepare top fixing hole, loosely fix with screw. With staple in vertical position mark bottom fixing hole, swing staple aside, prepare hole and fix. Secure top and bottom fixing screws. (Fig 1) **Do not overtighten.**



2. Close window and centralise lock body behind staple, with recess in lock body visible. Mark and prepare top fixing hole. Loosely secure with fixing screw, check operation then mark bottom fixing hole. Open window and swing lock body aside, prepare fixing hole then fit screw. Close window, secure top and bottom fixing screws. (Fig 2)

Do not overtighten. Check operation

NB. Equivalent imperial sizes are approximate

Do not excessively overtighten

Do not use abrasive cleaners, solvents or polish. Only use moist soft cloth

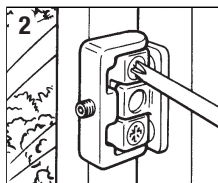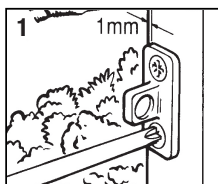

The world's favourite lock

www.yale.co.uk E-mail: locksinfo@yale.co.uk